

PERISTALTIC HOSE TOLERANCE GUIDE

ID (mm)	OD (mm)	Tolerance (mm)	Length (mm)	Tolerance (mm)
10	31.0	0.8	508	3.2
15	36.0	0.8	762	3.2
25	53.2	0.4	1006	3.2
32	61.0	0.4	1251	3.2
40	66.4	0.4	1489	3.2
50	80.0	0.4	1821	3.2
65	99.2	0.4	2337	3.2
80	122.0	0.5	2781	3.2
100	144.0	0.5	3277	3.2

When replacing hoses in peristaltic pumps with shoes that require shimming, make certain that your customer has shimmed the hose correctly. Re-shimming the pump incorrectly before restarting it can cause damage to the new hose. Details on how to re-shim a hose should be available through the pump manufacturer.



salem-republic rubber company

1-800-686-4199 · (330)938-9809 fax

475 West California Avenue · Sebring, Ohio 44672 · USA

www.salem-republic.com · srr@salem-republic.com